

5302553

Digital Kitchen Scale



Thank you for purchasing a Taylor® Kitchen Scale. Your scale is an example of superior design and craftsmanship. Please read this instruction manual carefully before use. Keep these instructions handy for future reference.

GENERAL WEIGHING OPERATION

1. This scale operates on 3 'AAA' batteries (included).
2. Place the scale on a hard, level surface.
3. Press "**TARE/⏻**" to turn the scale on. The display first shows "**8888**", then zero when it is ready for use. If the display does not show zero, press "**TARE/⏻**" to reset (tare) the scale to zero.
4. Your scale is set at the factory to weigh in pounds/ounces. To switch between grams (g), fluid ounces (fl:oz), pounds and ounces, (lb:oz) and milliliters (ml), press the "**UNIT**" button.
Liquid ingredient measurement: The liquid measure feature is suitable for all water based liquids, including wine, milk, stock, cream etc. Note: Oils have a lower specific gravity, which will result in a volume reading of approximately +10%. If measuring oils by volume on this scale, please adjust for this accordingly.
5. Place the item to be weighed on the center of the platform. The weight will display. As you add weight, the weight displayed increases.
6. The scale will turn off automatically after 3 minutes of non-use or if there is no change in weight after 3 minutes. Press and hold "**TARE/⏻**" to turn the scale off manually.

BATTERY REPLACEMENT

1. Your Taylor® scale is equipped with a low battery indicator. It will display "**LO**" or readings will grow dim or become irregular if the batteries need replacement.
2. Open the battery compartment on the bottom of the scale.
3. Remove the old batteries. Place the new batteries into the battery compartment according to the correct polarity (+/-) symbols. Always replace all batteries at the same time; do not combine old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.
4. Replace the battery compartment cover.

NOTE: Please recycle or dispose of batteries per local regulations.

WARNING: Batteries may pose a choking hazard. As with all small items, do not let children handle batteries. If swallowed, seek medical attention immediately.

PRECAUTIONS:

Do not dispose of batteries in fire. Batteries may explode or leak. Remove the batteries if the scale will not be used for a long period of time. Remove used batteries promptly. Always purchase the correct size and grade of battery most suitable for the intended use.

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

Clean the battery contacts and also those of the device prior to battery installation.

TARE OPERATION

You may wish to weigh ingredients a bowl or other container (not included). In this case, you will need to tare, or offset, the weight of the bowl so that only the weight of the ingredients is displayed.

1. Choose a container that will safely balance on the platform without tipping or falling. Do not use a heavy container, as this might reduce the maximum capacity of the scale.
2. While the scale is off, place the empty container on the scale platform. Turn the scale on. The display will show zero. The weight of the container has been zeroed out.
3. Add the ingredient to be weighed. The weight of the ingredient alone will display.
4. The weight of additional ingredients may be tared out as well. For example, if a recipe calls for $\frac{1}{2}$ lb rice and $\frac{1}{2}$ lb beans, place the rice into the bowl. Once the correct amount of rice is weighed, press **"TARE/⏻"** until the display is reset to zero. Add the $\frac{1}{2}$ lbs of beans. Both ingredients have been accurately weighed in the same bowl.
5. When weights have been tared out, the display will show a negative number when the items are removed from the scale. To reset the scale back to zero for a new measurement, press **"TARE/⏻"** until the display resets to zero.

PRECAUTIONS

1. Clean exposed parts with a soft, slightly damp cloth. To remove stains, use a mild soap. Never use detergents, excess water, treated cloths, harsh cleaning agents, or sprays. Avoid contact with acids, such as citrus juices.
2. Do not tamper with the scale's internal components. Doing so will invalidate the warranty on this unit and may cause damage. The scale contains no user-serviceable parts.
3. Although your scale is designed to be maintenance-free, it contains sensitive electronic parts. Avoid rough treatment. Treat it with care to ensure the best performance.
4. This scale is intended for home/consumer use only. It is not intended for commercial or medical use.
5. This scale is designed to read weights up to 15lb/7000g/246floz/7000ml. To prevent damage, do not place more than 15lb/7000g/246floz/7000ml on it.
6. Do not store scale where you store cleaning chemicals. The vapors from some household products may affect the electronic components of your scale. Do not store scale on its side.
7. This scale is an extremely sensitive weighing device. In order to prevent run down of the battery, do not store anything on the scale.
8. Do not dispose of batteries in fire. Batteries may explode or leak. Do not mix old and new batteries. Remove the batteries if the scale will not be used for a long period of time.
9. Unstable Warning: Should **"unSt"** appear on the display, this indicates the scale is unstable. Place the scale on a hard, level surface during use.
10. Overload Warning: Should **"EEEE"** appear on the display during a weighing, this indicates that the maximum weighing capacity of the scale has been exceeded. Remove the weight immediately; otherwise, permanent damage could occur.

Party issuing Supplier's Declaration of Conformity & Responsible party – U.S. Contact information:

Taylor Precision Products
2311 W. 22nd Street, Suite 200
Oak Brook, IL 60523

Equipment:

Product Name: Kitchen Scale
Model No.: 5302553
Trade Name: Taylor

We declare under our sole responsibility that the above referenced product has been tested according to FCC requirements and this device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ONE (1) YEAR LIMITED WARRANTY

Taylor® warrants this product to be free from defects in material or workmanship (excluding batteries) for one (1) year for the original purchaser from date of retail purchase. It does not cover damages or wear resulting from accident, misuse, abuse, commercial use, or unauthorized adjustment and/or repair. If service is required, do not return to retailer. Should this product require service (or replacement at our option), please pack the item carefully and return it prepaid, along with store receipt showing the date of purchase and a note explaining reason for return to:

TAYLOR | 2220 Entrada Del Sol, Suite A
Las Cruces, New Mexico 88001 USA
www.taylorusa.com
Email: taylorusa@lifetimebrands.com

There are no expressed warranties except as listed above. This warranty gives you specific legal rights, and you may have other rights which vary from state to state. For additional product information, or warranty information outside the USA, please contact us through www.taylorusa.com

© 2023 Taylor, a division of Lifetime Brands, Inc. All rights reserved. Oak Brook, IL, 60523

Made to our exact specifications in China. | Not legal for trade.

5302553 4.23 WC